

TP-7200-12

12.1" Display PC



User's Guide

Table of contents

1 WELCOME! 5

1.1 What's in the box..... 5

1.2 Product overview 5

1.3 Spec Table:..... 7

2 INSTALLATION..... 8

2.1 Power on the device 9

2.2 Installation..... 10

2.3 GPIO Address Table.....11

2.4 BIOS Setup Menu.....12

3 MAINTENANCE 22

3.1 Cleaning..... 22

4 IMPORTANT INFORMATION 23

4.1 SAFETY INFORMATION..... 23

4.2 Environmental information 25

4.3 Regulatory information 26

4.4 EMC notice 26

4.5 Explanation of symbols..... 30

4.6 Legal disclaimer..... 31

4.7 Technical specifications 32

Contact Information

Teguar Corporation

1 Welcome!

1.1 What's in the box


Overview :

- TP-7200-12 12.1" Display PC
- Thank you for choosing the TP-7200-12 product. This device is intended to serve as a computing unit in an industrial institution for general use by personnel.
- Power adaptor and power cord provided according to final country destination.
- User Guide (PDF)

Keep your original packaging. It is designed for this display PC and provide the ideal protection during transport and storage.


1.2 Product overview

Front :

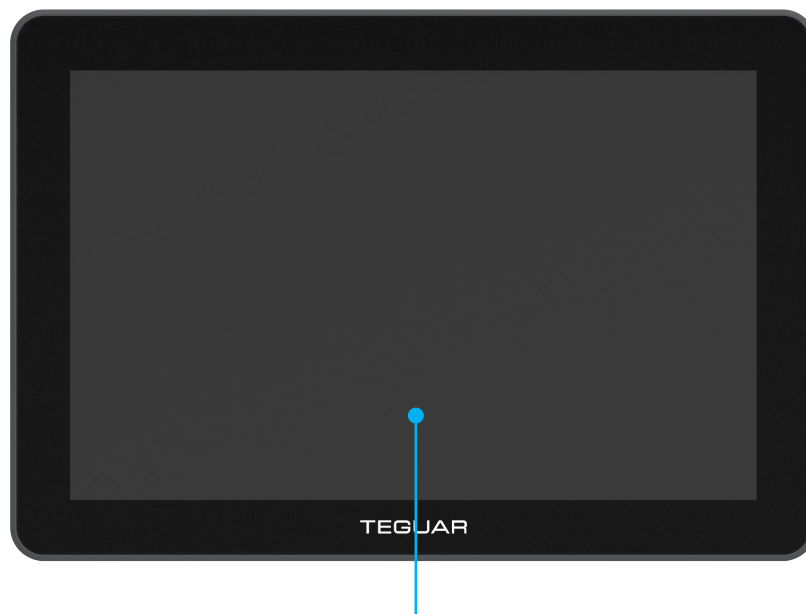


Touch Screen

Bottom :

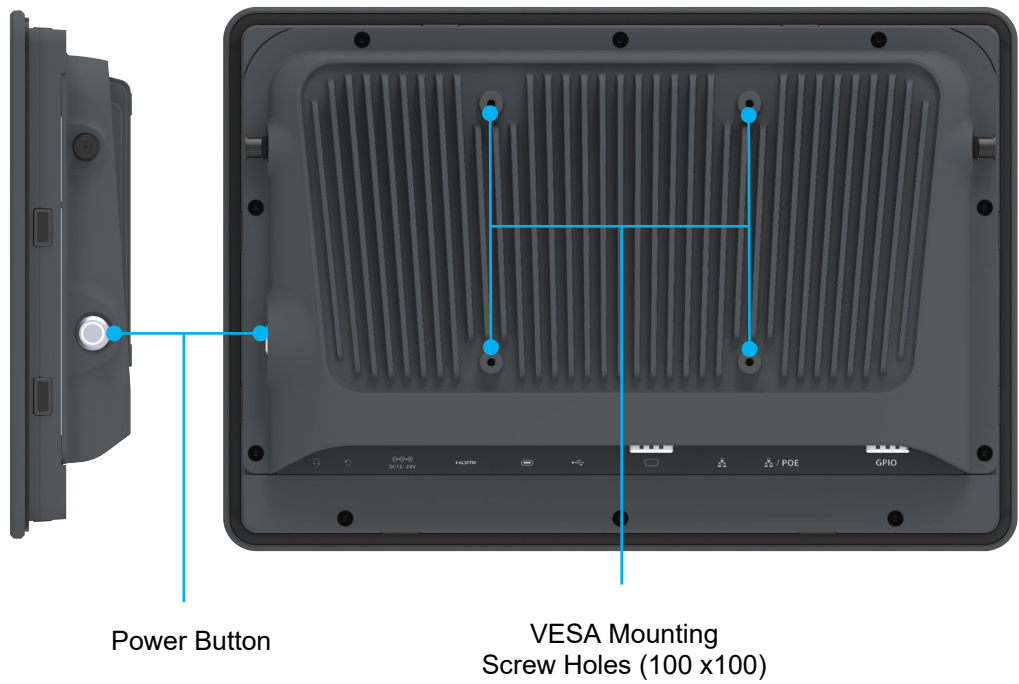

Bottom View:

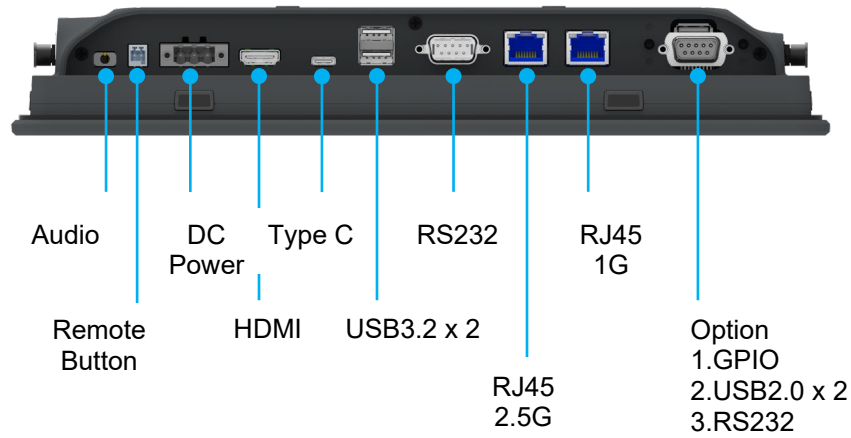

1.3 Spec Table:

Item	Description
Processor (SoC)	Intel ® Core® Ultra 7 155U / Core® Ultra 5 125U
BIOS	Insyde
Operating System	Windows 11 Pro/Ubuntu 22.04/Windows 10 Pro/Windows 10 IOT
Networking	Gigabit Ethernet LAN interfaces (2 ports, 1 support 2.5G).
Memory	DDR5 4800 SODIMM RAM
Storage	PCIe 2280 M.2, SSD module
LCD Panel Characteristics	12.1" TFT LCD 1280 x 800 pixels resolution, 475 cd/m2 typ. brightness
Audio port	1 x (3 in1) Audio Combo Jack
USB	2 x USB 3.2 type A port 1 x USB 3.2 type C port, support DP and PD . PD input 20V/3A, PD output 5V/1A
Button	1 x Power button
Input device	Touchscreen multi-touch (PCAP technology / Resistive touch)
Wireless	Wi-Fi 6E BT 5.3
Power source input	12~24 VDC
Option I/O ports	RS232/422/485, GPIO, USB2.0*2
Power supply	60W AC-DC power supply
Operating temperature	0 °C to 50 °C
Operating humidity	20% to 80% for performance / 10% to 90% for safety (non-condensing)
Storage temperature	-20 °C to 60 °C
Storage humidity	10% to 93% (non-condensing)
Storage altitude	70 to 110 kPa
Operating altitude	3000 m (Max)
Weight	2.8 Kg
Dimensions (W x H x D)	307 x 210 x 48.5 mm
Certification	Europe: CE US: FCC

2 Installation



WARNING: Read all the important safety information before installing and operating your display PC. Please refer to the dedicated chapter in this user guide.



WARNING: Sufficient expertise is required to install this equipment. All devices and complete setup must be tested before taking into operation.



CAUTION: When the display PC is assembled to the system, take care of the fixation of all cables, to avoid unwanted detachment.



CAUTION: The equipment is not intended to be sterilized.

2.1 Power on the device

Power on the device:

- Connect the DC input.
- Auto power on when DC input attached.
- Option from BIOS setup menu to set pushing short the power button to power on the device:



- Power requirements: The equipment must only be powered using the delivered approved 12~24VDC () SELV power supply.
- The approved DC power supply must be powered by the AC mains voltage.
- The power supply is specified as a part of the ME equipment or combination is specified as a ME system.
- WARNING! To avoid the risk of electric shock, this equipment must only be connected to a supply mains.
- Disconnect device: Appliance inlet of Power Adapter, please do not to position the Power Adapter too far to difficultly operate the disconnection device.
- The equipment should be installed near an easily accessible outlet.
- The equipment is intended for continuous operation.
- If a different power supply will be used, further investigation for safety and EMC requirements have to be performed at system level.
- Phoenix block input is Negative(-) / NC / Positive(+)


2.2 Installation

Please use VESA qualified VESA 100mm mounting M4x10mm screws.

VESA




Cut out

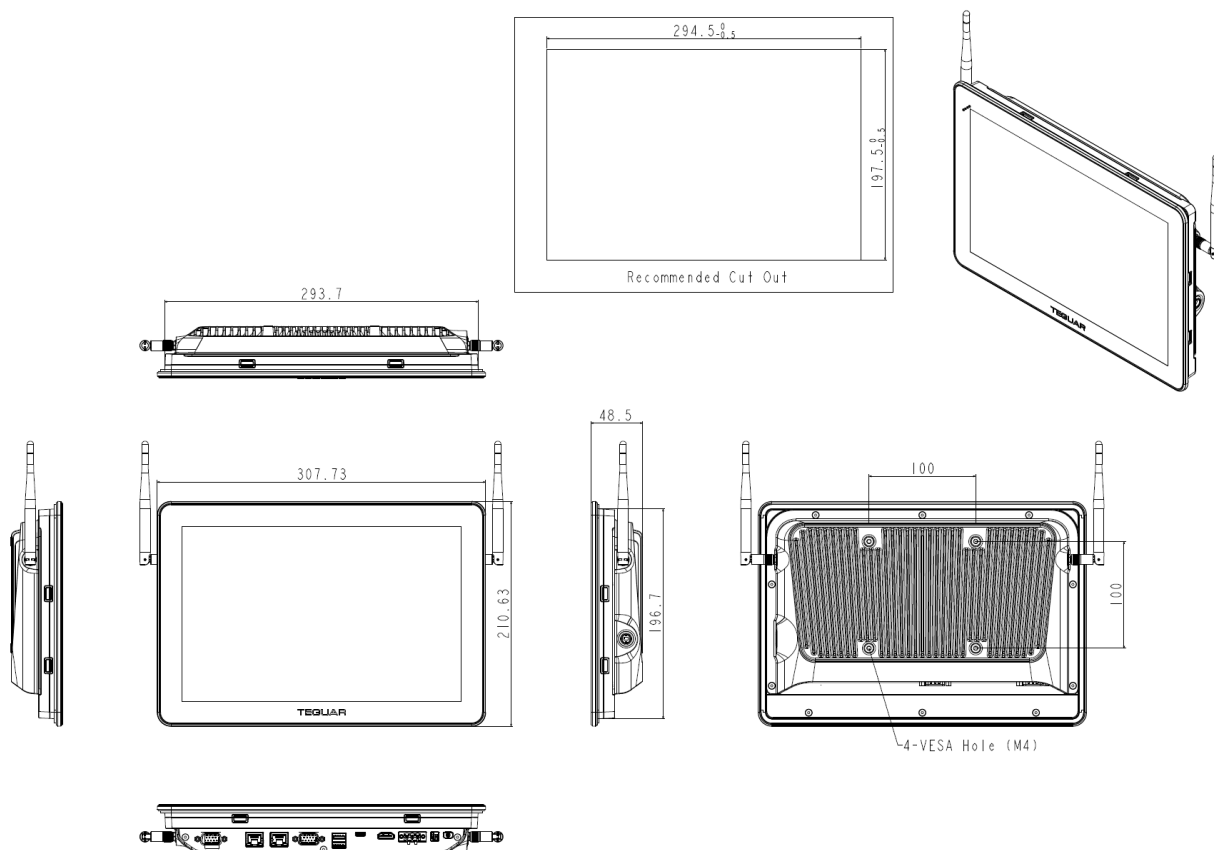

2.3 GPIO Address Table

GPIO Address Table


PIN	Signal	GPIO	Function
1	GPIO_OUT1	GPIO_VER3_GPP_D0	OUTPUT_3.3V
2	GPIO_OUT2	GPIO_VER3_GPP_D1	OUTPUT_3.3V
3	GPIO_IN1	GPIO_VER3_GPP_D4	INPUT_3.3V
4	GPIO_IN2	GPIO_VER3_GPP_D13	INPUT_3.3V
5	GND		GND
6	GPIO_IN3	GPIO_VER3_GPP_D14	INPUT_3.3V
7	GPIO_IN4	GPIO_VER3_GPP_D16	INPUT_3.3V
8	GPIO_OUT3	GPIO_VER3_GPP_D2	OUTPUT_3.3V
9	GPIO_OUT4	GPIO_VER3_GPP_D3	OUTPUT_3.3V

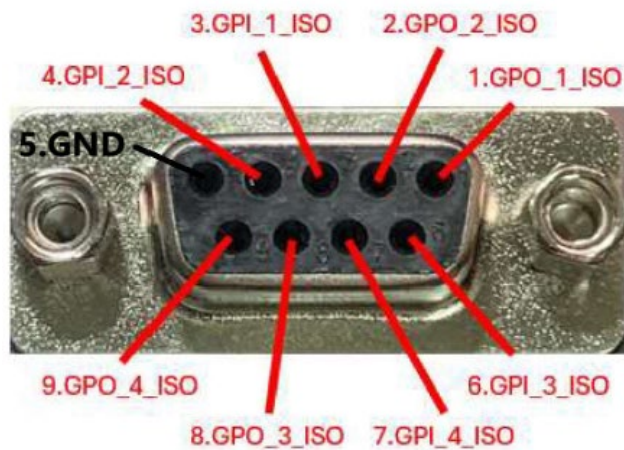

2.4 BIOS Setup Menu

2.4.1 Graphic UI Support

Screen resolution is set to default 1024x768 in BIOS graphic menu.

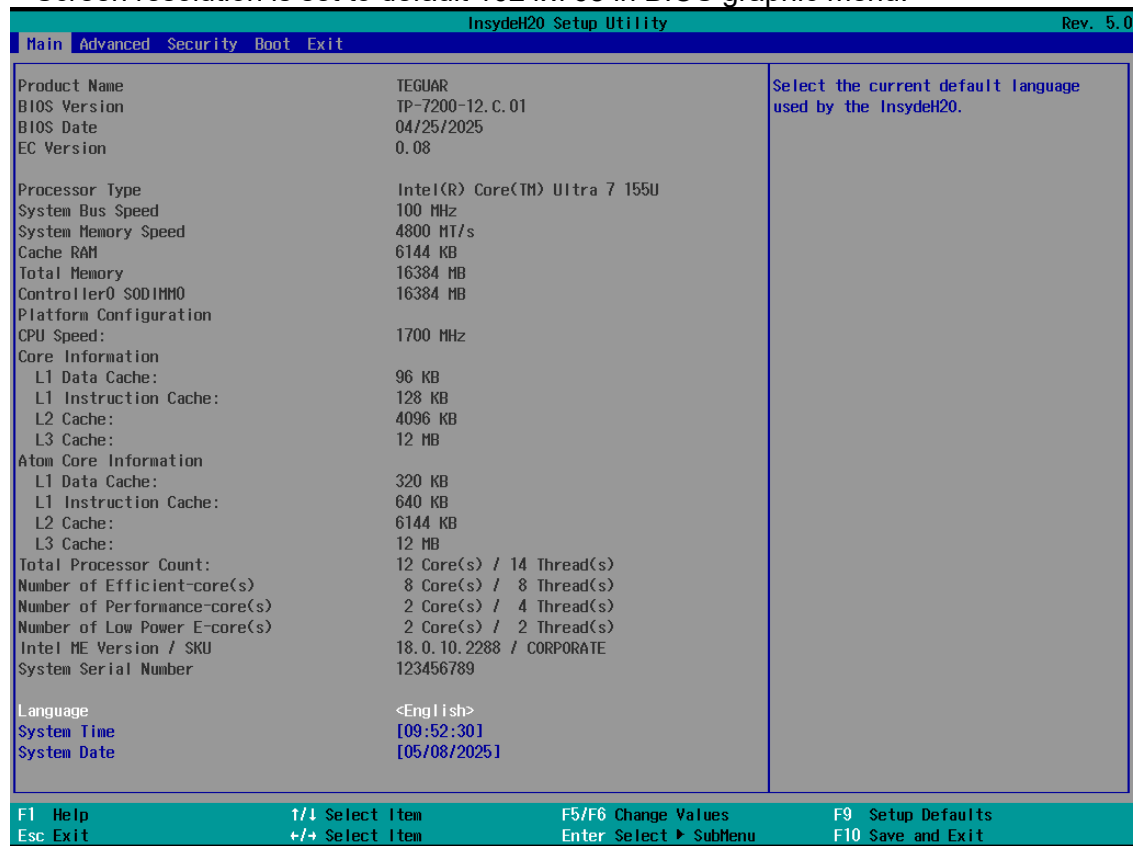


2.4.2 USB Hotkey Support during POST

- Press the F2 key to BIOS Setup Menu, The Setup Menu will be displayed until the user makes a selection.
- Press the F5 key to Boot menu, The menu will show up all bootable devices.
- Press the F3 key to Administrator Secure Boot menu, The menu will show up all secure boot options
- Press the ESC key to Front Page, the user can select to “Continue”, “Boot Manager”, “Administer Secure Boot” and “Setup Utility”.

2.4.3 BIOS options and their default values


2.4.3.1 Main menu

The Main menu is the first screen that you will see when you enter the BIOS Setup Utility

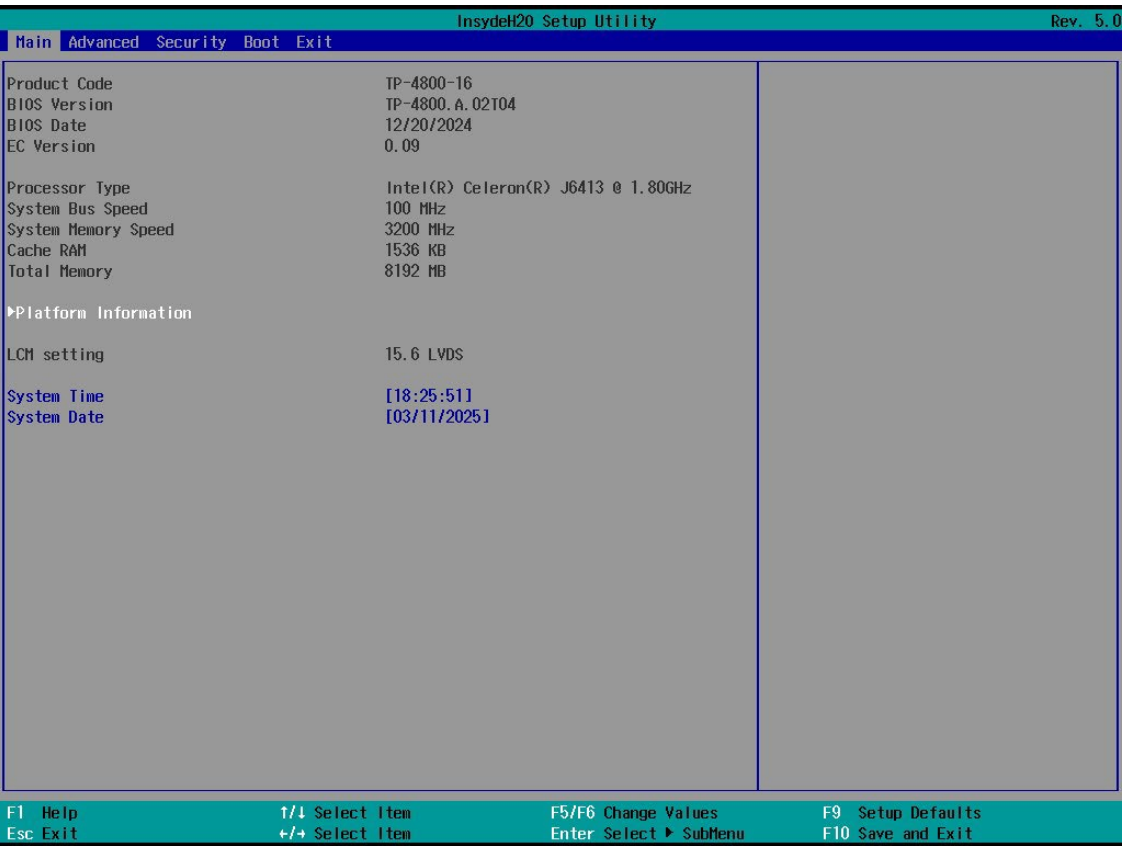


2.4.3.2 Advanced

The advanced menu allows you to configure your system for basic operation.

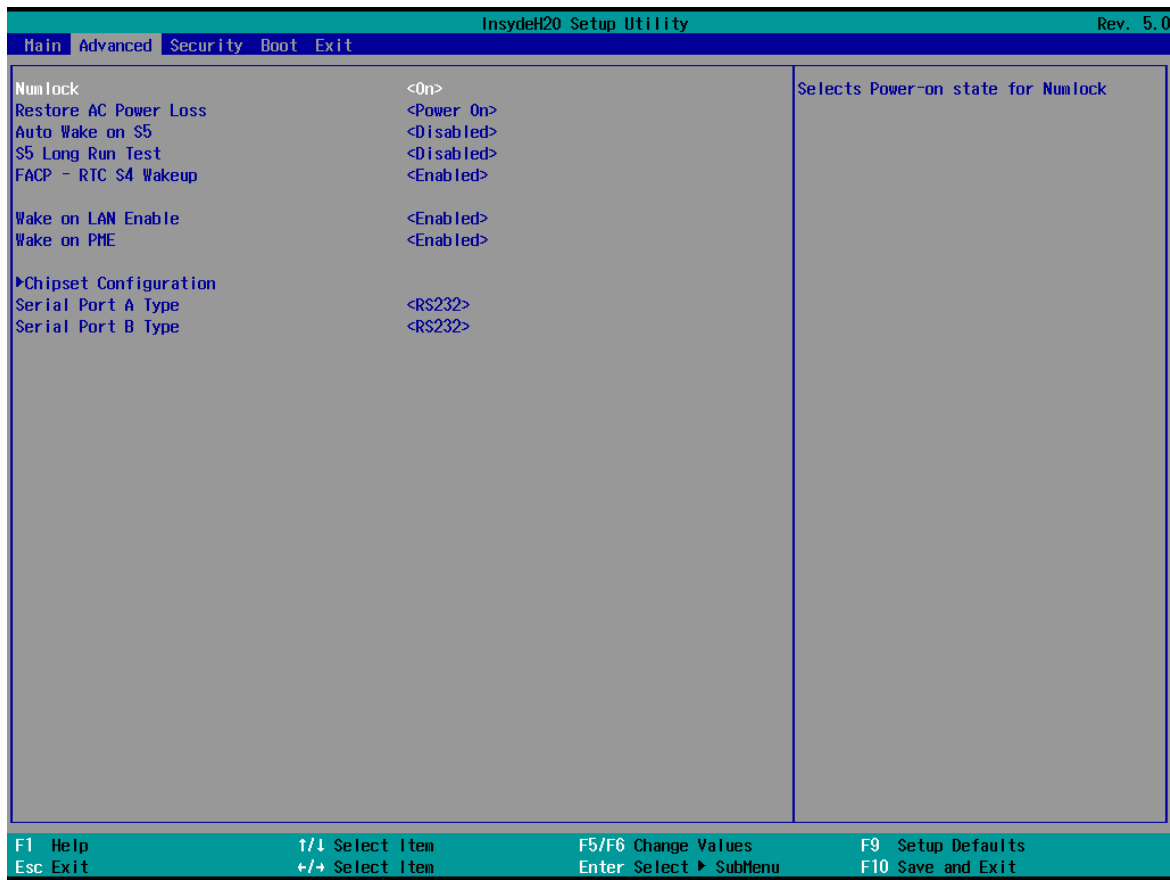

Numlock <On> - Selects Power-on state for Numlock.

Restore AC Power Loss <Power on> - Specify what state to go to when AC power is re-applied.

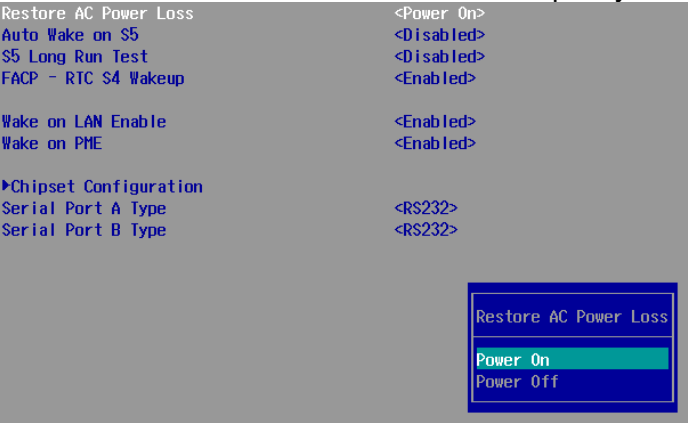

Auto Wake on S5 <Disable> - Auto wake on S5, By Day of Month or Fixed time of every day.



<By Every Day>

Auto Wake on S5	<By Every Day>
Wake on S5 Time	[00:00:00]

<By Day of Month>

Auto Wake on S5	<By Day of Month>
Wake on S5 Time	[00:00:00]
Day of Month	[1]

Wake on LAN <Enable> - Enable /Disable integrated LAN to wake the system.

Wake on PME <Enable> - Determines the action taken when the system power is off and a PCI Power Management Enable wake up event occurs.

►Chipset Configuration

Platform Trust Technology <Disabled> - Enable/Disable Platform Trust Technology.

Warning: If Supervisor/User Password is verified with TPM, change this option will disable password automatically.

Serial Port A Type <RS232> - Set Serial Port A Type

Serial Port B Type <RS232> - Set Serial Port B Type

The Serial Port A & B select options according to the required functions, as shown below.

<RS232>

<RS485/422 FULL-DUPLEX>


<RS485 TX HALF-DUPLEX>

<RS485 RX HALF-DUPLEX>

<RS485 TX/RX Auto Control HALF-DUPLEX>


<LOOPBACK>

<By Board DIP-SWITCH>

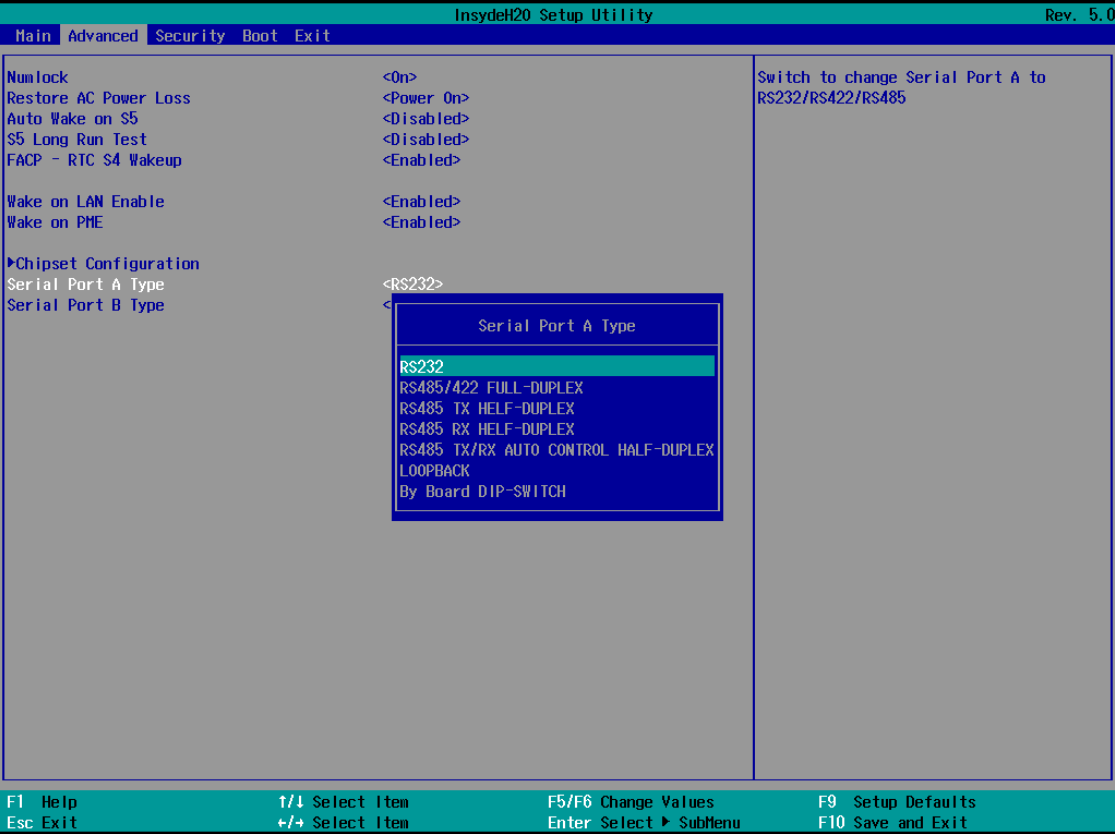

2.4.3.3 Security


This section allows you to configure the BIOS security settings

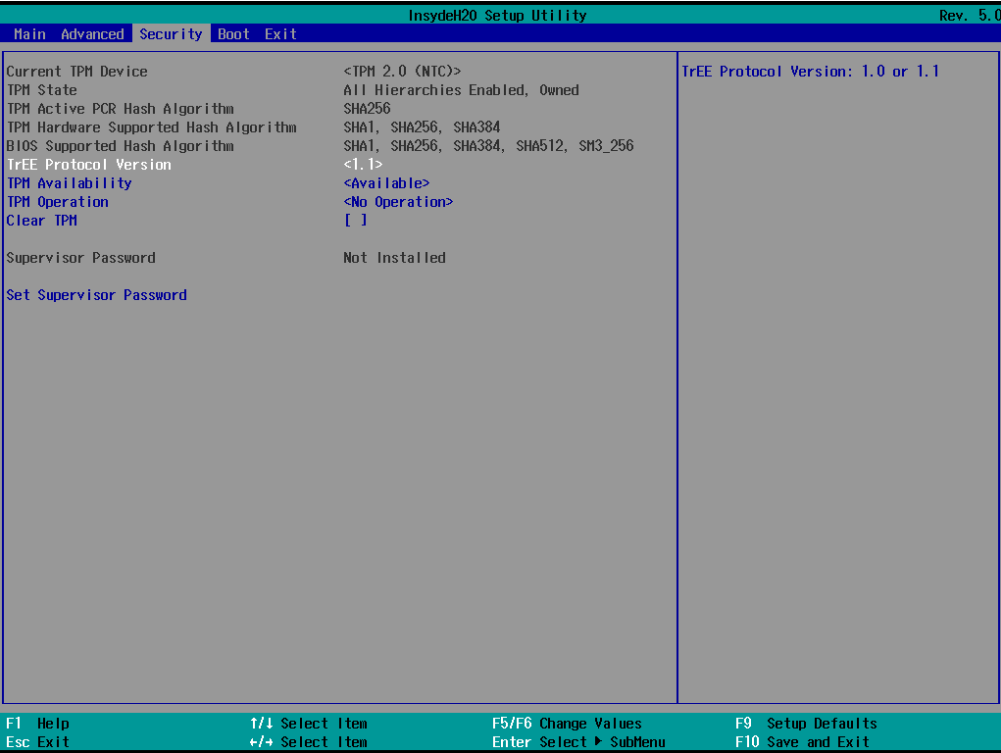

TrEE protocol Version <1.1> - TrEE Protocol Version: 1.0 or 1.1

TPM Availability <Available> - When hidden, don't expose TPM to OS

TPM Operation <No Operation> - Select one of the supported operations to change TPM2 state.

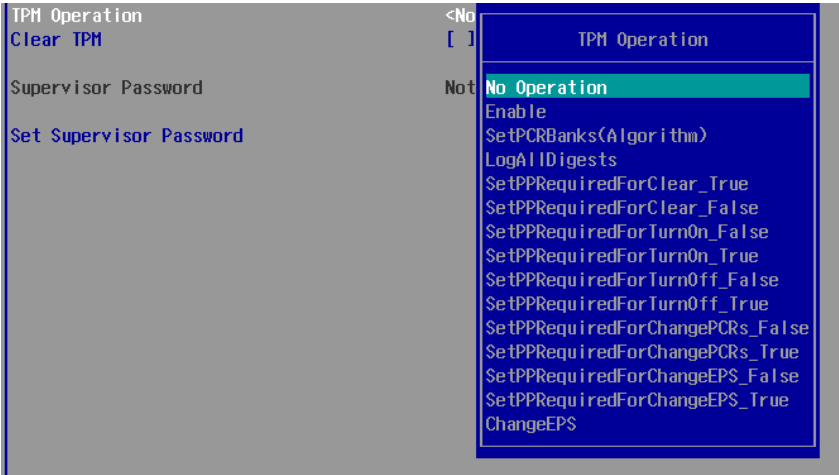

Clear TPM [] - Clear TPM. Removes all TPM context associated with a specific Owner.




Supervisor Password <Not Installed> - display the system password setting status



Set Supervisor Password - Install or Change the password and the length of password must be greater than one character



Please pay attention to the password setting rules

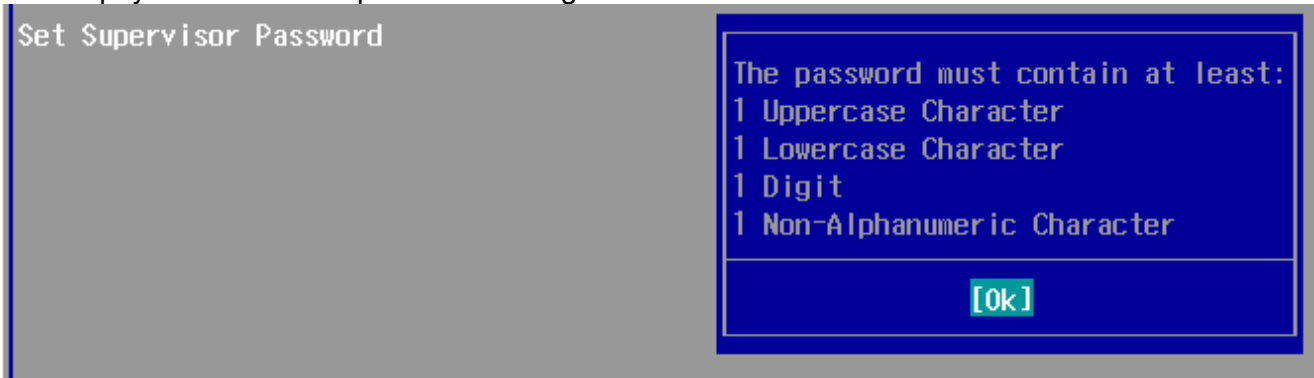


Power On Password <Disable> - When Supervisor Password is set, this option will appear.

Enable: System will ask input password on post time.

Disable: System will ask input password when go to Setup Utility.



When [Power On Password] is Enable , user boot up the system, system will pop up the dialog to request password

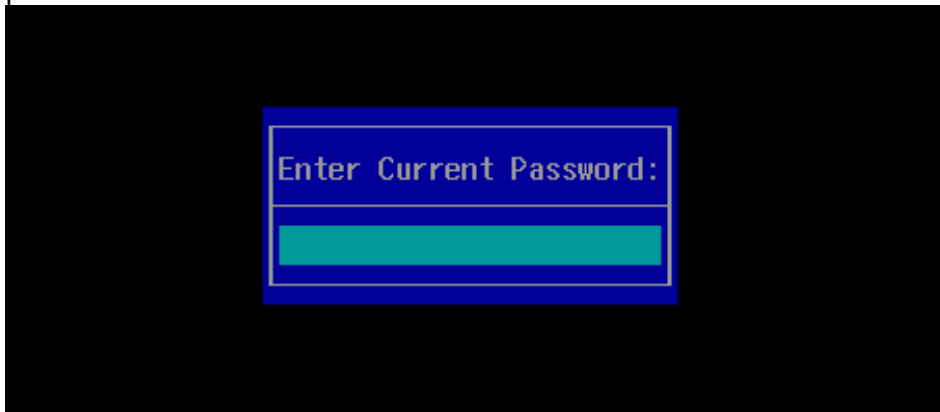

If typo or wrong 3 times , system will request restart the system




If typo or wrong 3 times, please

1. Press power button to shutdown, boot up again and type correct password
2. Press Ctrl+Alt+Del to restart system, and type correct password.


2.4.3.4 Boot

This section allows you to configure the boot options.

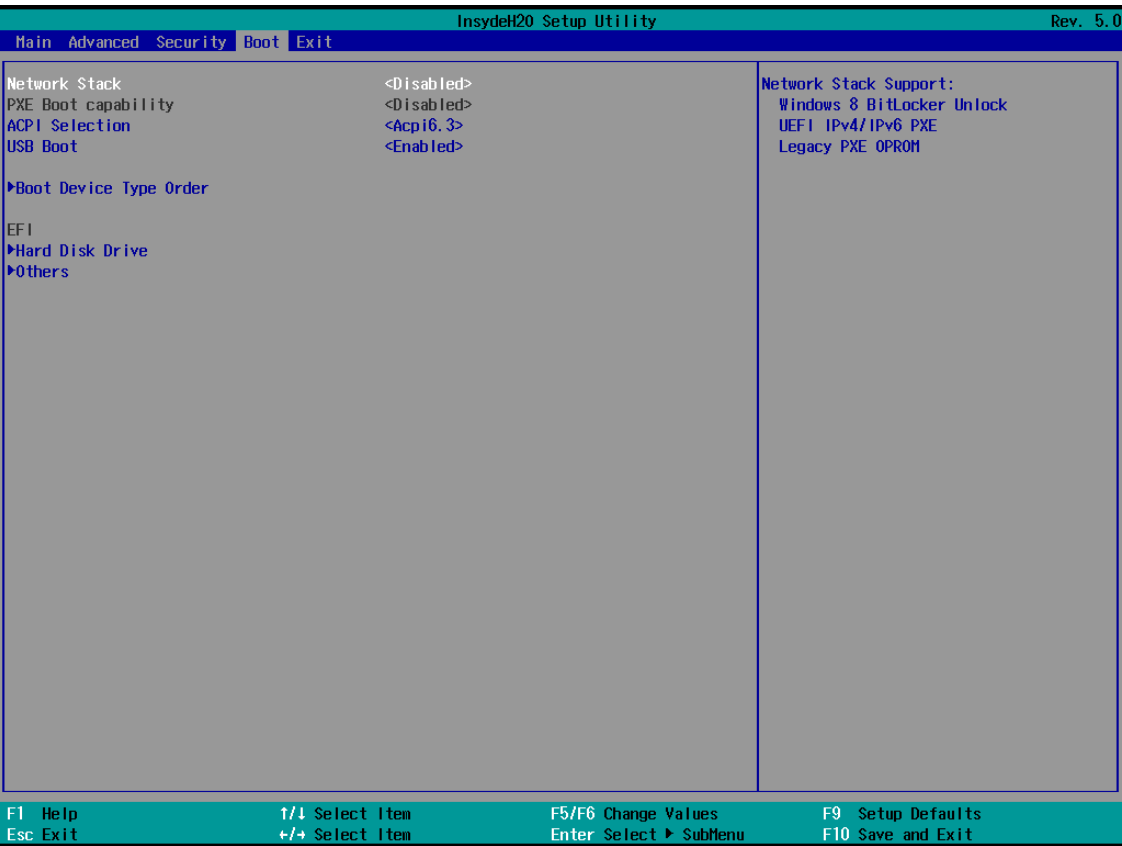


Network Stack <Disable> - Network Stack Support: UEFI IPv4/IPv6 PXE

PXE Boot capability <Disable> - When the item is set Enable, this option can be select IPv4 or 6 type.
Disable: Not support PXE Boot capability
Enable: Support PXE Boot capability for IPv4/IPv6/both

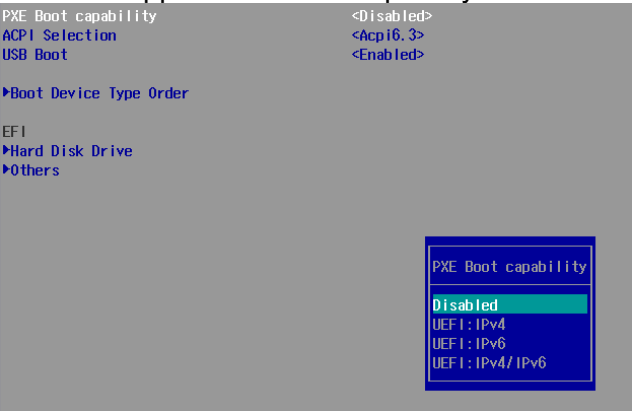


ACPI Selection <ACPI 6.3> - Select booting to ACPI 3.0/4.0/5.0/6.0/6.1/6.2/6.3

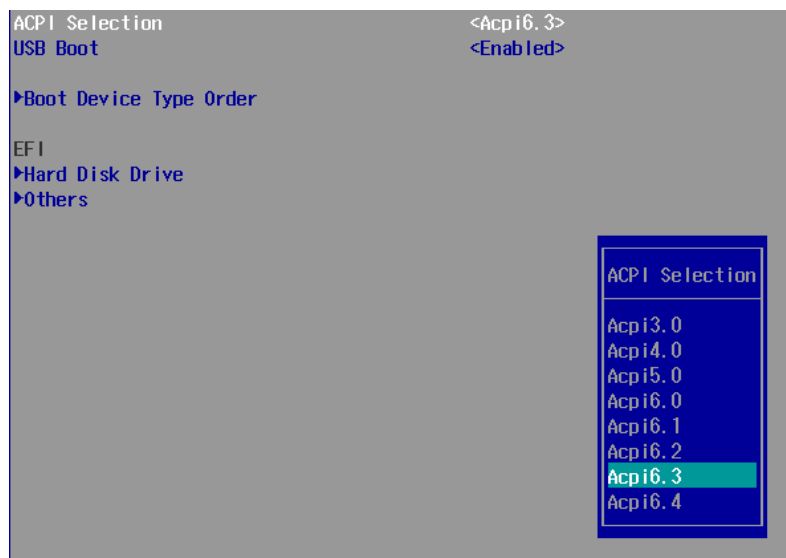


USB Boot <Enable> - Disable or enables booting to USB boot devices.

►Boot Device Type Order - Change Boot Device Type Order.

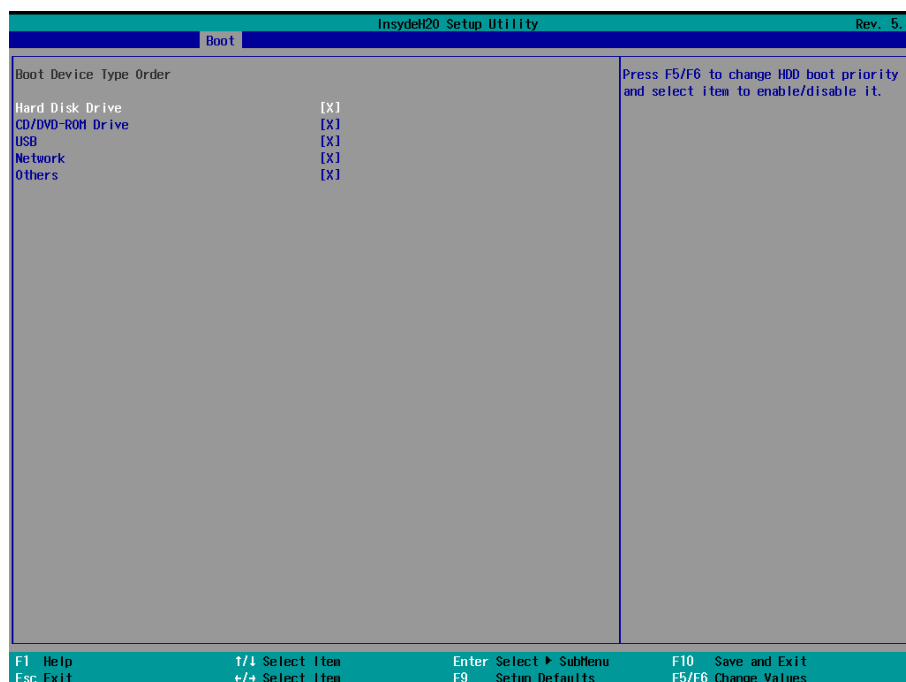


EFI

►Hard Disk Drive - Change Hard Disk Drive Boot Order

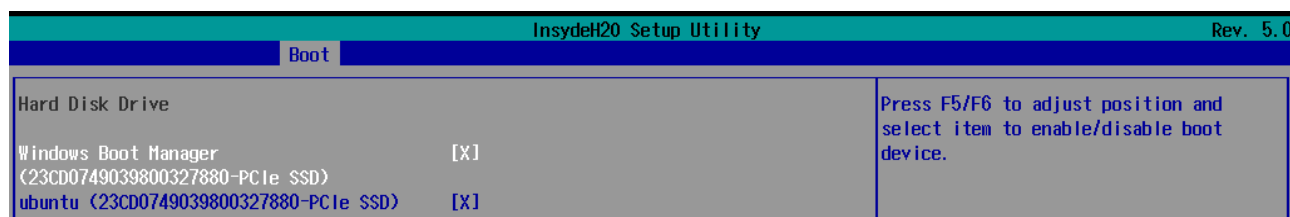


►Others - Change other Drive Boot Order

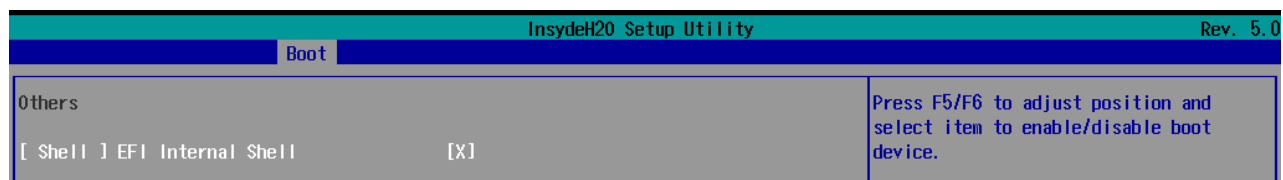

2.4.3.5 Exit

This section allows you to safely exit the BIOS Setup Utility and store any modified settings.

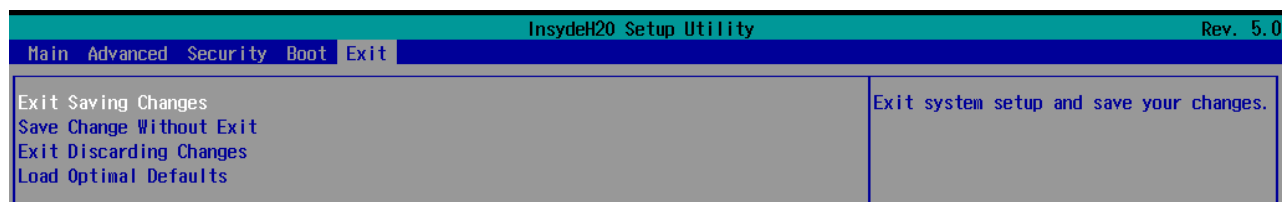

Exit Saving Changes - Exit system setup and save your changes.

Save Change Without EXIT - Save your changes and without exiting system.

Exit Discarding Changes - Exit system setup and without saving your changes.

Load Optimal Defaults - Load Optimal Defaults.

3 Maintenance

About

- The TP-7200-12 does not require any scheduled maintenance or calibration activities.

3.1 Cleaning



WARNING: Unplug the power cable from the mains power input before cleaning the display PC.



CAUTION: Take care not to damage or scratch the front glass or LCD. Be careful with rings or other jewelry and do not apply excessive pressure on the front glass or LCD.



CAUTION: Do not apply or spray liquid directly to the display as excess liquid may cause damage to internal electronics. Instead, apply the liquid to a cleaning cloth.

To clean the display PC:

Clean the display using a sponge, cleaning cloth or soft tissue, lightly moistened with a recognized cleaning product for equipment. Read and follow all label instructions on the cleaning product. In case of doubt about a certain cleaning product, use plain water.

Possible cleaning solutions:

- 75% isopropyl alcohol.
- 1.6% aqueous ammonia.
- Sodium hypochlorite (bleach) 5%.
- 0.5% Chlorhexidine in 70% isopropyl alcohol.

Do not use following products:

- Alcohol/solvents at higher concentration > 70%.
- Strong alkalis lye, strong solvents, Acid, Detergents with fluoride.
- Detergents with ammonia at higher concentration > 1.6.
- Detergents with abrasives.
- Steel wool, Sponge with abrasives, Steel blades, Cloth with steel thread.

4 Important information

4.1 Safety information

General recommendations:

- Read the safety and operating instructions before operating the device.
- Retain safety and operating instructions for future reference.
- Adhere to all warnings on the device and in the operating instructions manual.
- Follow all instructions for operation and use.

Electrical Shock or Fire Hazard:

- To prevent electric shock or fire hazard, do not remove cover.
- No serviceable parts inside. Refer servicing to qualified personnel.
- Do not expose this apparatus to rain or moisture.

Modifications to the unit:

- Do not modify this equipment without authorization of the manufacturer.

Preventive maintenance:

- Periodic maintenance inspections are essential to keep the monitor in optimum condition and ensure safe operation.
- With the monitor disconnected from the mains, perform the following periodic check:
- Check the integrity of the power cord and inspect its routing, so that it is not under the risk of being punched or cut.

General recommendations:

- Keep the monitor clean to prolong its operational lifetime.
- LCD panel performance may deteriorate in the long term.
- Periodically check that it is correctly operating.
- Periodically check the tightness of the VESA mount screws. If not sufficiently tight, the monitor may detach from the arm, which may result in injury or equipment damage.

Type of protection (electrical):

- Monitor provided with external power supply: Class II equipment.

Degree of safety (flammable anesthetic mixture):

- Equipment not suitable for use in the presence of a flammable anesthetic mixture with air or with oxygen or nitrous oxide.
- The equipment is not operable if the air oxygen content is above 25%.

Child safety:

- Equipment not suitable for use in locations where children are likely to be present.

Mission critical applications:

- We strongly recommend to immediately have a replacement display available in mission critical applications.

Transient over-voltage:

- To fully disengage the power from the device, please disconnect the power cord from the AC inlet.

Connections:

- To maintain compliance with EMC Regulation, use only shielded interface cables for the connection to peripheral devices.

Power cords:

- Please use the power cord provided with this equipment. If a power cord is not supplied with this equipment, please contact your supplier.
- Do not overload wall sockets and extension cords as this may result in fire or electric shock.
- Mains lead protection: Power cords should be routed so that they are not likely to be walked upon or pinched by items placed upon or against them, paying particular attention to cords at plugs and receptacles.
- The power supply cord should be replaced by the designated operator only, at all time.

Liquids and moisture:

- Never expose the equipment to liquids or moisture.
- Never use the equipment near water - e.g. near a bathtub, washbasin, swimming pool, kitchen sink, laundry tub or in a wet basement.

Moisture condensation:

- Do not use the equipment under rapidly changing temperature and humidity conditions or avoid direct contact with cold air from air-conditioning outlet.
- Moisture may condense on the surface or inside of the equipment, or create a mist residue inside the protection plate. This is not a malfunction of the product itself, although it may cause damage to the equipment.
- If condensation exists, leave the equipment unplugged until there is no condensation.

Ventilation:

- When installing the device in a cupboard or another enclosed location, heed the necessary space between the set and the sides of the cupboard.
- The LCM becomes warm during operation. This is not a malfunction. Allow adequate air circulation to reduce the temperature of the equipment.

Installation:

- Place the equipment on a flat, solid and stable surface that can support the weight of at least 3 units. If you use an unstable stand, the equipment may fall, causing serious injury to a child or adult and/or serious damage to the equipment.
- Do not allow to climb or rest on the equipment.
- Provide full attention to safety during installation, periodic maintenance and examination of this equipment.
- Sufficient expertise is required for installing this equipment. Be sure to entrust the attachment of this equipment to the wall to a duly skilled technician and pay adequate attention to safety during the installation and usage.
- The manufacturer is not liable for any damage or injury caused by mishandling or improper installation.
- The equipment should be installed near an easily accessible place. Do not install or leave the unit in places subject to extreme temperatures, near a radiator, heating vent, or in places subject to mechanical vibration or shock. Subjecting the display PC to extreme temperatures, could cause deformations of the casing or malfunctions.
- Avoid to place the unit near any equipment that generates a strong electro-magnetic field.
- Avoid places subject to inordinate amounts of dust, dirt, or sand, for example near an open window or an outdoor exit.
- If setting up temporarily in an outdoor environment, be sure to take adequate precautions against airborne dust and dirt. Otherwise unrecoverable malfunctions could occur.

Handling:

- Do not press on or scratch the front protection screen. Do not place a heavy object on the equipment.
- If the equipment is used in a cold place, a residual image may appear in the screen. This is not a malfunction. The screen returns to normal as the temperature rises to a normal operating level.
- If a still picture is displayed for a long time, a residual image may appear for a while. The residual image will eventually disappear.

Transportation:

- Disconnect the cable from the equipment when transporting.

- When you transport the equipment, hold it firmly in both hands. If you drop the equipment, you may be injured or the equipment may be damaged.
- When you transport the equipment for repair or shipment, use the original cardboard box and packing materials.

Malfunctions:

- Disconnect the equipment's power cord from the AC inlet and refer servicing to qualified service technicians under the following conditions:
- If the power cord or plug is damaged or frayed.
- If liquid has been spilled into the equipment.
- If the equipment has been exposed to rain or water.
- If the equipment does not operate normally when the operating instructions are followed. Adjust only those controls that are covered by the operating instructions since improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
- If the equipment has been dropped or the cabinet has been damaged.
- If the product exhibits a distinct change in performance, indicating a need for service.

General warnings:

- All devices and complete setup must be tested and validated before taking into operation.
- At end user application level, it is necessary to foresee a backup unit in case the equipment fails.
- The enclosure has to be checked upon collision damage; refer to qualified service personnel.
- The TP-7200-12 is intended for indoor use.
- Do not connect to the internet before you have installed an anti-virus software and Internet firewall.



CAUTION: The enclosure has to be checked upon collision damage, refer to qualified service personnel.

4.2 Environmental information

Disposal Information:



Waste Electrical and Electronic Equipment (WEEE)

This symbol on the product indicates that, under the European Directive 2012/19/EU governing waste from electrical and electronic equipment, this product must not be disposed of with other municipal waste. Please dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

RoHS

Directive 2011/65/EC on the restriction of certain hazardous substances in electrical and electronic equipment.

According to what declared by our components suppliers, this product is RoHS compliant.

4.3 Regulatory information

Intended Purpose

- TP-7200-12 is a general hardware platform for use in the industrial environment. It can be used for third party software applications that provide a user interface for the systems.

Manufacturing country

- The manufacturing country of the product is indicated on the product label (“**Made in ...**”).

FEDERAL COMMUNICATIONS COMMISSION INTERFERENCE STATEMENT

FCC class B

- with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the device and receiver.
 - Connect the device into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Information (SAR)

- This device meets the government's requirements for exposure to radio waves. This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.
- The exposure standard employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the EUT transmitting at the specified power level in different channels.
- The FCC has granted an Equipment Authorization for this device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines.

4.4 EMC notice

General information

- This device is suitable for use in professional industrial facility environments only.
- With the installation of the device, use only the delivered external cables and power supply or a spare part provided by the legal manufacturer. Using another can result in a decrease of the immunity level of the device.



WARNING: Use of this equipment adjacent to or stacked with other equipment should be avoided because it could result in improper operation. If such use is necessary, this equipment and the other equipment should be observed to verify that they are operating normally.



WARNING: Use of accessories, transducers and cables other than those specified or provided by the manufacturer of this equipment could result in increased electromagnetic emissions or decreased electromagnetic immunity of this equipment and result in improper operation.



WARNING: Portable RF communications equipment (including peripherals such as antenna cables and external antennas) should be used no closer than 30 cm (12 inches) to any part of the TP-7200-12, including cables specified by the manufacturer.

Electromagnetic emissions

- The TP-7200-12 is suitable for use in the electromagnetic environment specified below. The customer or the user of the device should assure that it is used in such an environment.

Emissions test	Compliance	Electromagnetic environment – Guidance
RF emissions CISPR 11	Group 1	The TP-7200-12 uses RF energy only for its internal function. Therefore, its RF emissions are very low and are not likely to cause any interference in nearby electronic equipment.
RF emissions CISPR 11	Class B	The TP-7200-12 is suitable for use in all establishments, including domestic establishments and those directly connected to the public low-voltage power supply network that supplies buildings used for domestic purposes.
Harmonic emissions IEC 61000-3-2	Class D ⁽¹⁾	
Voltage fluctuations/ flicker emissions IEC 61000-3-3	Complies	

- This TP-7200-12 complies with appropriate EMC standards on emissions to, and interference from surrounding equipment. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- Interference can be determined by turning the equipment off and on.
- If this equipment does cause harmful interference to, or suffer from harmful interference of, surrounding equipment, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna or equipment.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced technician for help.

Electromagnetic immunity

- The TP-7200-12 is tested to be used in the electromagnetic environment specified below. The customer or the user of the TP-7200-12 should assure that it is not used in an environment that exceeds the listed test levels and limits.

1. Active power for TP-7200-12 is less than 75 W

2.

Immunity test	Compliance level	Electromagnetic environment – guidance
Electrostatic discharge (ESD) IEC 61000-4-2	± 8 kV contact ± 2 kV, ± 4 kV, ± 8 kV, ± 15 kV air	Floors should be wood, concrete or ceramic tile. If floors are covered with synthetic material, the relative humidity should be at least 30%
Electrical fast transient/burst IEC 61000-4-4	Input AC/DC Power Ports: ± 2 kV 5 / 50 Tr/Th (ns) 100 Repetition frequency (kHz) I/O and Communication Port: ± 1 kV 5 / 50 Tr/Th (ns) 100 Repetition frequency (kHz)	Mains power quality should be that of a typical commercial or hospital environment.
Surge IEC61000-4-5	Line to line: ± 0.5 kV, ± 1 kV Line to ground: ± 0.5 kV, ± 1 kV, ± 2 kV	Mains power quality should be that of a typical commercial or hospital environment.
Voltage dips, short interruptions and voltage variations on power supply input lines IEC 61000-4-11	0% residual voltage for 0.5 period at 0°, 45°, 90°, 135°, 180°, 225°, 270° and 315° 0% residual voltage for 1 period at 0° 70% residual voltage for 25 periods at 0° Voltage interruptions: 0% residual voltage for 250 periods at 0	Mains power quality should be that of a typical commercial or industrial environment.
Power frequency magnetic field IEC 61000-4-8	50 or 60 Hz 30 A/m	Power frequency magnetic fields should be at levels characteristic of a typical location in a typical commercial or industrial Environment
Conducted RF IEC 61000-4-6	3 Vrms (6 Vrms in ISM bands & amateur radio band) 150 kHz to 80 MHz	If there is a mark on the device as shown on the right
Radiated RF IEC 61000-4-3		symbol, the device can be located near the interference may occur 
Proximity magnetic fields IEC 61000-4-39	8 A/m 30 kHz CW 65 A/m 134.2 kHz 2.1 kHz Pulse modulation 7.5 A/m 13.56 MHz	

	50 kHz Pulse modulation	
--	-------------------------	--


Immunity to RF wireless communications equipment

Test frequency (MHz)	Band (MHz)	Service	Modulation	Maximum power (W)	Distance (m)	Immunity test level (V/m)
385	380 – 390	TETRA 400	Pulse modulation 18 Hz	1.8	0.3	27
450	430 – 470	GMRS 460, FRS 460	FM $\pm$ 5 kHz deviation 1 kHz sine	2	0.3	28
710	704 – 787	LTE Band 13, 17	Pulse modulation 217 Hz	0.2	0.3	9
745						
780						
810	800 – 960	GSM 800/900, TETRA 800, iDEN 820, CDMA 850, LTE Band 5	Pulse modulation 18 Hz	2	0.3	28
870						
930						
1720	1700 – 1990	GSM 1800, CDMA 1900, GSM 1900, DECT, LTE Band 1/3/4/25, UMTS	Pulse modulation 217 Hz	2	0.3	28
1845						
1970						
2450	2400 – 2570	Bluetooth, WLAN, 802.11 b/g/n, RFID 2450, LTE Band 7	Pulse modulation 217 Hz	2	0.3	28
5240	5100 – 5800	WLAN 802.11 a/n	Pulse modulation 217 Hz	0.2	0.3	9
5500						
5785						

4.5 Explanation of symbols

Symbols on the device

- On the device or power supply, you may find the following symbols (nonrestrictive list):

	Indicates the device meets the requirements of the applicable EC directives/ regulations.
	Indicates compliance with Part 15 of the FCC rules (Class A or Class B)
	Indicates the device is approved according to the UKCA regulations. 表示设备已根据 UKCA 法规获得批准
	RoHS compliant device
	Indicates this device must not be thrown in the trash but must be recycled, according to the European WEEE (Waste Electrical and Electronic Equipment) directive
	Halogen Free device
	Indicates Direct Current (DC)
	Indicates a device that can be broken or damaged if not handled carefully when being stored.
	Indicates a device that needs to be protected from moisture when being stored.
	Indicates the storage direction of the box. The box must be transported, handled and stored in such a way that the arrows always point upwards.
	Indicates the maximum number of identical boxes which may be stacked on each other, where “n” is the limiting number.
	Packing recycle

4.6 Legal disclaimer

Disclaimer notice

- Although every attempt has been made to achieve technical accuracy in this document, we assume no responsibility for errors that may be found. Our goal is to provide you with the most accurate and usable documentation possible; if you discover errors, please let us know.

Trademarks

- All trademarks and registered trademarks are property of Tegar.

4.7 Technical specifications

Overview

Description	TP-7200-12
Processor (SoC)	Intel ® Core® Ultra 7 155U / Core® Ultra 5 125U.
BIOS	INSYDE
Operating System	Windows 11 Pro/Ubuntu 22.04/Windows 10 Pro/Windows 10 IOT
Networking	Built-in Gigabit Ethernet LAN interfaces (2 ports), 1 port with 2.5G
Memory	DDR5 4800 RAM (module)
Local Storage	M.2, PCIE module
LCD Panel Characteristics	12.1" TFT LCD 1280 x 800 pixels resolution.
Audio System	1x (3in1) Audio Earphone Jack
USB	1 x USB 3.2 type A port*2 1 x USB 3.2 type C port, support DP and PD
Buttons and Controls	Power button
Input device	Touchscreen multi-touch (PCAP technology) / Resistive type
Power source input	12~24VDC Phoenix type plug (-/NC/+)
Option IOs	RS232/422/485 or GPIO or USB2.0 ports
Protection against electrical shocks	Class II
Power supply	external AC-DC power supply
Operating temperature (for safety)	10 °C to 40 °C
Operating temperature (for performance)	0 °C to 50 °C
Operating humidity	20% to 80% for performance / 10% to 90% for safety (non-condensing)
Storage temperature	-20 °C to 60 °C
Storage humidity	10% to 93%
Storage altitude	70 to 110 kPa
Operating altitude	3000 m (Max)
Durability	Rugged anti-shock design
Weight	3.1 kg (typical)
Dimensions (W x H x D)	379 x 231 x 48mm
Certifications & compliance	Europe: CE US : FCC